

SMITH| Style

Smith-Style Gemini DAB Radio

Instruction Menu



1	Safety Information	3			
2	Your DAB Digital Radio	4			
	2.1 What can you find inside of your package	4			
	2.2 Front View	5			
	2.3 Top View	5			
	2.4 Rear View.....	5			
3	Quick Setup	6			
4	Features	6			
	POWER button	6			
	4.1 Turn ON/OFF/STANDBY.....	6			
	DAB/FM button	6			
	4.2 Switching to DAB/FM mode.....	6			
	INFO/MENU button	6			
	4.3 Changing the DAB display information	6			
	4.4 DAB mode – choosing menu options.....	6			
	1. Menu	6			
	2. Full scan	7			
	3. Manual tune	7			
	4. Prune	7			
	5. System.....	7			
	5.1. Sleep.....	7			
	5.2. Time	7			
	5.3. Backlight	7			
	5.4. Language	8			
	5.5. Factory Reset	8			
	5.6. Software version	8			
	4.5 FM mode – choosing menu options	8			
	1. Menu	8			
	2. Scan setting	8			
	3. Audio setting	8			
	4. System	8			
	PRESET button	8			
	4.6 Preset 40 DAB stations and 40 FM favorite	8			
	4.7 Recall a station from the Preset list	9			
	–CHANNEL+ button	9			
	4.8 Choosing radio stations or options	9			
	–VOLUME + button	9			
	4.9 adjusting volume.....	9			
5	Troubleshooting	10			
6	Technical Specifications	11			
7	Guarantee	12			

Safety Information

General safety information

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorized handling of the device may damage it and will void your warranty.
- Do not use your radio near emergency/intensive care medical equipment or during an electrical storm.
- To avoid possible hearing damage, do not listen to this radio at high volume levels for long period of time. Always keep the volume within reasonable limits.

Power source

- Only use the power supply that came with the product. Using an unauthorized power supply will invalidate your guarantee and may irrecoverably damage the product.
- Disconnect your radio from the mains power supply during thunderstorms.
- Always check that you have completely switched off your radio, before you change or disconnect the power supply.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- If the radio will not be used for a long period of time, make sure that all of the batteries are removed from the battery compartment and

the mains power is unplugged.

- Only use recommended batteries or those of the same or equivalent type.
- Do not mix old and new batteries or batteries of different types.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Remove the batteries from the radio if they will not be used for an extended period of time.
- Never throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from young children.
- In general, battery chargers and power supplies should not be plugged in at night or when are not home. ALL products are CE approved and certified.

Moisture and water

- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- Do not leave it in low temperatures as moisture can from inside the product, which may damage the circuit board.

Ventilation

- Do not block or cover slots, holes or opening on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.

Heat sources and flames

- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Keep it away from bright sunlight or heat sources, such as a radiator.

2 Your DAB Digital Radio

Carefully remove your radio from the box. You may wish to store the packaging for future use.

2.1 What can you find inside of your package

- DAB Digital Radio
- Mains power supply lead
- Instruction manual
- Guarantee Booklet

Mains Power



Your DAB/FM Radio requires a mains supply of 230V AC ~ 50 Hz. Please ensure that your mains supply is compatible before use. Disconnect the Power Cord from the mains when not in use.

Position of DAB Digital Radio

Place on a flat, stable surface that is not subject to vibrations.

Avoid the following locations:

- Where it is exposed to direct sunlight
- Where it is close to heat radiating sources
- Where the humidity is high and ventilation is poor
- Where it is dusty

Adjusting the Aerial

Fully extend the aerial to ensure good reception in both DAB and FM Radio modes. It may be necessary to alter the position of the DAB Digital Radio and/or the aerial to achieve the best signal.

Using Headphones

 
Headphones require a 3.5mm diameter stereo plug and an impedance of 8-32 ohms. Headphones are not supplied with this DAB Digital Radio.

2.2 Front View

2.3 Top View

1. **POWER button**

Press to turn on/off the unit, or press to enter 'standby' during connected with adapter.

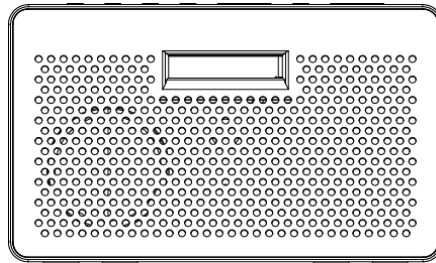

2. **DAB/FM button**

 
Press to switch between DAB, FM mode.

3. **INFO/MENU button**

Press to view station information, or press and hold to display menu options.

4. **PRESET button**

Press and hold to enter 'save list', press SELECT to save a station as a preset, or press to enter the 'save list', then press SELECT to recall a saved preset station.

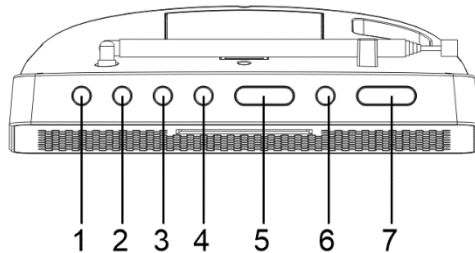


5. **- CHANNEL +**

Press to enter 'station list', or press to select options.

6. **SELECT button**

7. **- VOLUME + button**

 Press to increase/decrease the volume.

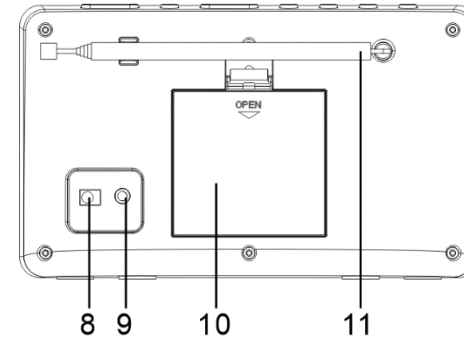

2.4 Rear View

8. **DC-In socket**

Used to connect the DAB Digital Radio to the mains power supply

9. **Headphone socket**

Used to connect the headphone to the DAB Digital Radio

10. **Battery Pack**

Use 4pcs x AA battery to operate the DAB Digital Radio.

11. **Aerial**

3. Quick Setup

1. Connect the power cable to the DAB Radio and mains supply, or insert 4 x AA batteries into battery compartment.
2. Raise and extend the aerial.
3. Turn radio on by pressing the POWER button
4. The first time the radio is switched on, it will start up in DAB mode. It will automatically scan for the available radio stations.
5. In DAB mode, the CHANNEL button allows you to navigate between different stations. Press SELECT to choose the one you want to listen to.

4 Features

POWER button

4.1 Turn ON/OFF/STANDBY

1. Turn on the DAB Digital Radio by pressing the POWER button. The first time the DAB Digital Radio is switched, it will start up DAB mode. It will automatically scan for the available radio stations.
2. When your DAB Digital Radio is using power adapter, press POWER button to switch 'on' and 'standby'. Unplug the power adapter to turn off your Digital Radio completely.
3. When your DAB Digital Radio is using batteries, press POWER button to switch 'on' and 'off'.

DAB/FM button

4.2 Switching to DAB/FM mode

1. The first time the DAB Digital Radio is switched, it will start up DAB mode.
2. If the DAB Digital Radio is in DAB mode, press the DAB/FM button repeatedly until FM is shown on the display.
3. Once in FM mode, your DAB Digital Radio will tune to the start of the available FM range (87.50MHz) or the last FM station listed.
4. To manually change the FM frequency, make sure that you have not selected any other sub-menus. Turn the – CHANNEL+ to change the frequency by 0.05MHz.

INFO/MENU button

4.3 Changing the DAB display information

1. If the DAB Digital Radio is in DAB mode, press INFO/MENU button to select different info to show on the display, such as DLS (Dynamic Label Segment), signal strength, PTY (Programme Type), ensemble, frequency, signal quality, bitrate codec, time, date.
2. If the DAB Digital Radio is in FM mode, press INFO/MENU button to select different info to show on the display, such as radio text, PTY (Programme Type), PS (Programme Service), stereo/mono, time, date.

4.4 DAB mode – choosing menu options

1. If the DAB Digital Radio is in DAB mode, press and hold

INFO/MENU button to enter the menu list. Press the –CHANNEL+ button to select option through the list of menu. Then, stop at your preferred option and press the SELECT button to confirm. The menu options are: full scan, manual tune, prune, system.

2. Full scan – under menu list, press the –CHANNEL+ button to select “Full scan“ through the list of menu, press SELECT button to confirm and full scan starts automatically. Once a scan is completed, the radio returns to play the previously-selected station or first station on the station list.

Note: if no radio station found, it shows “DAB No Signal”. For a better reception, extend the antenna or do the full scan again in another place.

3. Manual tune – as well as the normal method of scanning, you can also manually tune to a particular channel/frequency. This can be useful for adjusting your antenna to achieve the best possible reception and scanning a particular channel to update the station list.

Under menu list, press the –CHANNEL+ button to select “Manual tune” through the list of menu, press SELECT button to confirm. Then press the –CHANNEL+ button to select a particular channel/frequency and then press SELECT button to confirm the setting.

The display shows a live indication of the received signal strength on the selected frequency. Adjustments to your antenna will be manifested in the received signal strength displayed.

4. Prune – this removes all invalid stations indicated in the station list with a ‘?’ in front of the station name.

Under menu list, press the –CHANNEL+ button to select “Prune” through the list of menu, press SELECT button to confirm. Then press the –CHANNEL+ button to select <Yes>, and press SELECT button to confirm

5. System – the System menu options are: Sleep, Time, Backlight, Language, Factory Reset, SW version.

5.1. Sleep – when listening to the radio you can set a period of time before the radio enters ‘standby’ mode.

Note: the radio must be active and not in ‘standby’ mode already.

Under the system menu, press the –CHANNEL+ button to select “Sleep” through the list of menu, press SELECT button to confirm. Then press the –CHANNEL+ button to select < sleep off / 15mins / 30mins / 45mins / 60mins / 90mins >, and press SELECT button to confirm.

5.2. Time – if there are any DAB+ radio signal, the machine will automatically update the time, there is no signal, can also be set manually.

*Set Time/Date: set hour / set minute / set month / set date>set year > saved

*Auto update options: Update From Radio / No Update

*Set 12/24 hour: 12hour/24hour

*Set date format: DD-MM-YYYY/MM-DD-YYYY

Cycle through Time menu by press the –CHANNEL+ button, select a particular option, and press the SELECT button changes.

5.3. Backlight – this radio display has a backlight which can be adjustable. You can select the time out of the display

backlight of your radio.

Under the system menu, press the –CHANNEL+ button to select “Backlight” through the list of menu, press the SELECT button to confirm. You can now use the –CHANNEL+ button, then press the –CHANNEL+ button to select < 10sec / 20sec / 30sec / 45sec / 60sec / 90sec / 120sec / 180sec / On >, and press SELECT button to confirm.

5.4. Language – You can change the display language of your radio, there are 9 options available. Press and hold the ‘Info/Menu’ button, scroll to <System> <Language>.

5.5. Factory Reset – this function clears all user defined settings, replacing them with the original default values, so time/date, preferences/settings, DAB station list and preset stations are all lost.

Under the system menu, press the –CHANNEL+ button to select “Factory Reset” through the list of menu, press the SELECT button to confirm. Then, use the –CHANNEL+ button to choose <Yes> and press the SELECT button to start the factory reset.

5.6. Software version – this is used to display the current software version.

Under the system menu, press the –CHANNEL+ button to select “Software version” through the list of menu, press the SELECT button to confirm. Then, the existing SW version will be showed.

4.5 FM mode – choosing menu options

1. If the DAB Digital Radio is in FM mode, press and hold

INFO/MENU button to enter the menu list. Press the –CHANNEL+ button to select option through the list of menu. Then, stop at your preferred option and press the SELECT button to confirm. The menu options are: scan setting, audio setting, system.

2. Scan setting – by default, FM scans stop at any available station (All stations). This may result in poor quality audio from weak stations.
Options: Strong stations only / All stations
Under menu list, press the –CHANNEL+ button to select a particular option in “Scan setting”, then press the SELECT button to confirm the change to new setting.
3. Audio setting – by default, all stereo stations are reproduced in stereo. For weak stations, this may result in poor quality audio. The audio quality can be improved using mono.
Options: Stereo allowed | Forced mono
Under menu list, press the –CHANNEL+ button to select a particular option in “Audio setting”, then press the SELECT button to confirm the change to new setting. It will automatically change to new setting after 3 seconds.
4. System – Please refer to 4.4, point 5 “System”

PRESET button

4.6 Preset 40 DAB stations and 40 FM favorite stations

1. Store a station to the preset list – to store a station, selected your desired radio station, then press and hold the PRESET button for a seconds until the LCD display “Preset store

#: (Empty)", or "#: saved radio station".

Either press the –CHANNEL+ button to select your desired station preset number, press on the SELECT button to confirm your selection, the display will show "Preset # Stored".

4.7 Recall a station from the Preset list

1. To recall a preset station, press the "PRESET" button once, either rotate the –CHANNEL+ button to select presets station that you have stored. When the display shows your desired preset number, press SELECT button to confirm.

Note: If you choose a preset that hasn't been allocated a station, then "Empty" will be displayed.

–CHANNEL+ button

4.8 Choosing radio stations or options

1. If the DAB Digital Radio is in DAB mode, press –CHANNEL+

button to cycle through the radio station list when you are listening. Or press –CHANNEL+ button to cycle through the menu list for options.

2. If the DAB Digital Radio is in FM mode, press –CHANNEL+ button to manual adjust the frequency by 0.05MHz. Or you can press and hold –CHANNEL+ button to auto-scan station. Or press –CHANNEL+ button to cycle through the menu list for options.

–VOLUME + button

4.9 adjusting volume

1. Press – to decrease the volume, and press + to increase the volume.

5. Troubleshooting

Problem	What to do
There is no sound from my radio	Check that the volume is not set to the minimum. Make sure that the radio has been able to locate DAB/FM stations.
The display shows 'DAB NO Signal' in DAB mode	Make sure that DAB coverage exists in your area. Try adjusting the position of the aerial or location of the radio.
Poor reception	As with any radio service, there will be areas of weak signal that may cause poor reception. Follow the instructions for Manual Tuning on 4.4, point 6 and adjust the aerial while monitoring the signal strength until the optimum signal is obtained. If reception is still poor, try re-locating the radio to another part of the room.
I cannot access secondary services	At the time of publishing this manual not many secondary services are available in the UK. This will increase as more DAB stations start broadcasting. If a secondary service station is available, the secondary indicator '>>' will be displayed next to the station name.
Some of the buttons on the DAB Digital Radio are not working	This may be caused by electrostatic discharge. Turn the DAB Digital Radio off, disconnect the mains plug and reconnect after a few seconds.

6. Technical Specification

Power Supply	230V AC ~ 50 Hz 4 x AA Batteries
Adapter:	DC 5V, 1000mA
Speaker Output Power	1x1Wrms
Frequency Range	FM: 87.5-108 MHz; DAB: 174-240 MHz
LCD Display	High resolution display
Max Power Consumption	5W
Dimensions	185(W) x 58(D) x110(H) mm

7. Guarantee

This product is guaranteed for 1 year from the date of original purchase against mechanical and electrical defects. You will get extra 2 years warranty period by registered your product within 30 days after purchase. Please fill in required information on the warranty card and email back to cs@smith-style.com within 30 days of purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to and does not diminish your statutory or legal rights.

Guarantor: Smith-Style Consumer Products Company Ltd.
Unit 5, KBF House
55 Vitoria Road, RH15 9LH,
Burgess Hill, UK



This symbol indicates that this product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit

www.recycle-more.co.uk

Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.

This symbol indicates that batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.

Never throw batteries in a fire or attempt to open the outer casing.